

MOONEY AIRCRAFT PILOTS ASSOCIATION

MAINTENANCE FAMILIARIZATION COURSE FOR THE MOONEY AIRCRAFT PILOT



VOLUME 1 NORMALLY ASPIRATED MOONEYS M20B THROUGH M20J (MSE)



Richard Oswald
Compiled by
Jerry Manthey

The following information is for educational purposes only
and has no reflection on any product or person.



3115 Boeing Road
Cameron Park, CA 95682

jereth@direction.net
(530) 222-9157

1-916-947-6397

JERRY MANTHEY
MAPA Maintenance Instructor

Mooney Aircraft Pilots Association

VOLUME 1

TABLE OF CONTENTS

FORWARD

INTRODUCTION

CHAPTER 1

The basics
Safety
Tools
Hardware



CHAPTER 5

Fuel Systems



CHAPTER 2

Airframe, General
Flight Control
Flaps and
Speed Brakes



CHAPTER 6

Electrical
Instruments
Oxygen



CHAPTER 3

Landing Gear
and Brakes



CHAPTER 7

Preventive
Maintenance
Documentation



CHAPTER 4

Engine
Propellers
Engine Accessories



HYDRAULIC
5

CAP
RING
ATTACHED
USES
ANNUAL
RT #

AIR
USE /
BOOTS

Lycoming **OPERATORS** **MANUAL**

O-360 SERIES
168 or 180 - HORSEPOWER



Lycoming

DIVISION - *Avco* CORPORATION
WILLIAMSPORT • PENNSYLVANIA

 
L 8817-36A

OPERATOR'S MANUAL

Lycoming

MODEL O-360 SERIES
AIRCRAFT ENGINES

Approved by

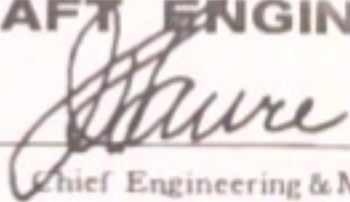

Chief Engineering & Mfg Branch
Federal Aviation Agency

Date

April 1, 1962

Revised April 1, 1963

Lycoming

DIVISION - **Arco** CORPORATION

WILLIAMSPORT • PENNSYLVANIA

Part No. 60297-4

 
This Revision D.E.E.R. Approved

PRICE \$1.50

PRINTED IN U.S.A.

DIRECT DRIVE ENGINE


Overhaul Manual

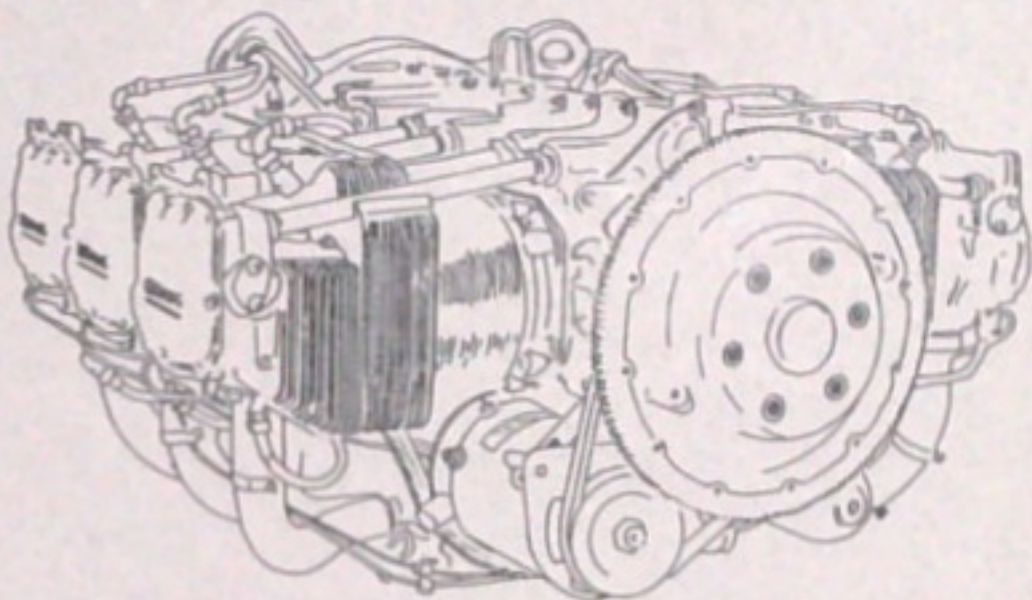

PART NO. 60294-7

Overhaul Manual

 Direct Drive Engine

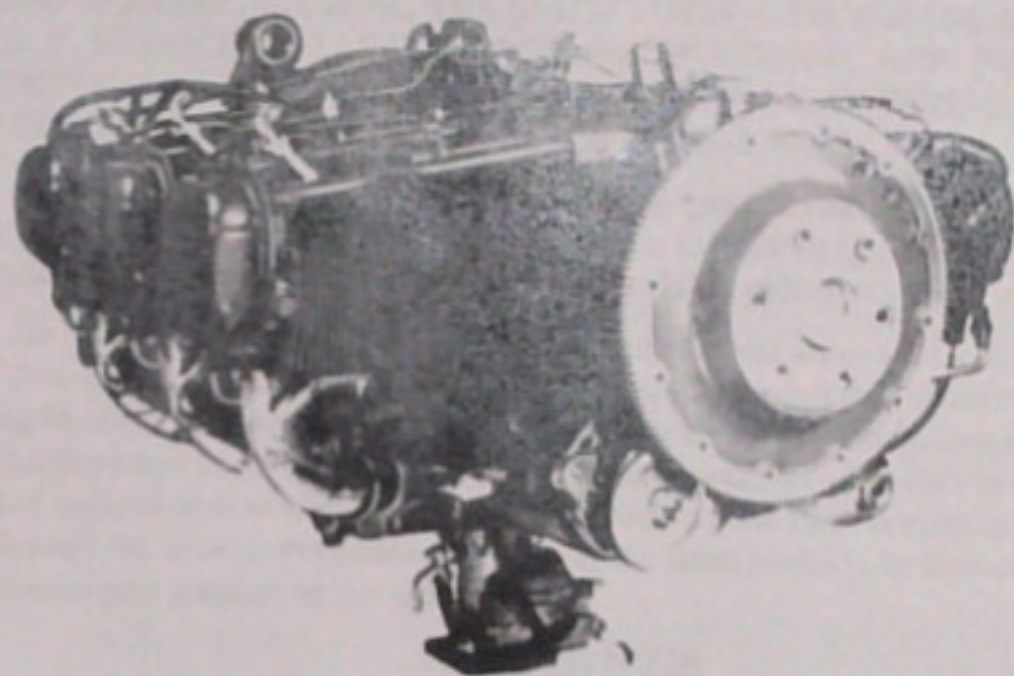

Approved by F.A.A.

TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
1 INTRODUCTION	1-1	4 IGNITION SYSTEM (CONT.)	
2 GENERAL DESCRIPTION		Inspection	
Cylinders	2-1	Ignition Harness	4-3
Valve Operating Mechanism	2-1	Magnetos	4-3
Hydraulic Tappets	2-2	Repair and Replacement	
Crankcase	2-3	Ignition Harness	4-3
Crankshaft	2-3	Magnetos	4-4
Crankshaft Counterweights	2-3	Reassembly	
Accessory Housing	2-3	Magnetos	4-5
Connecting Rods	2-3	Installation	
Pistons	2-3	Magnetos	4-5
Lubrication System	2-3	Timing Magneto to Engine	4-5
Cooling System	2-4	Ignition Harness	4-8
Induction System		5 ACCESSORY HOUSING	
Carbureted	2-6	Disassembly	5-1
Fuel Injected	2-6	Cleaning	5-1
Turbocharger Controls	2-6	Inspection	5-5
Ignition System	2-6	Repair and Replacement	5-5
3 GENERAL OVERHAUL PROCEDURES		Reassembly	5-5
General	3-1	Dual Drives	5-9
Cleaning		Fuel Pumps	5-10
Degreasing	3-1	Oil Filter	5-10
Removal of Hard Carbon	3-1	Oil Cooler Bypass Valve	5-10
Inspection		6 CYLINDERS, PISTONS AND VALVE TRAIN	
General	3-2	General	6-1
Bearing Surfaces	3-2	Removal from Engine	
Gears	3-2	Disassembly	6-7
Corrosion	3-2	Cleaning	6-7
Screwed Fittings	3-2	Inspection	6-7
Magnetic	3-2	Cylinders	6-8
Corrosion Prevention	3-3	Pistons	6-9
Repair and Replacement		Valve Rockers	6-10
Damaged Parts	3-3	Push Rods	6-10
Painted Parts	3-3	Valves	6-10
Replacement of Studs	3-3	Hydraulic Tappets	6-11
Corrosion Prevention	3-3	Valve Springs	6-13
Reassembly		Modifications	6-13
Corrosion Prevention	3-3	Repair and Replacement	6-13
Prelubrication of Parts	3-3	Spark Plug Inserts	6-14
Oilite Bushings	3-4	Valve Seats	6-15
Pitch Alignment and Backlash		Valve Guides	6-17
in Bevel Gear Assemblies	3-4	Valve Rocker Thrust Washers	6-17
Table of Limits	3-5	Valve Rocker Shaft Bushing	6-18
Oil Seals and Gaskets	3-5	Plain Steel Cylinder Barrels	6-19
Arbitrary Replacement of Parts	3-5	Nitrided Cylinder Barrels	6-20
4 IGNITION SYSTEM		Chrome Plated Cylinder Barrels	6-20
General	4-1	Valve Repair	6-20
Magnetos		Warped Exhaust Flanges	6-20
Impulse Coupling	4-1	Reassembly	
Retard Breaker	4-1	Assembly of Pistons	6-20
Engine Firing Order	4-1	Assembly of Cylinders	6-21
Ignition Harnesses	4-1	Installation of Pistons	6-21
Spark Plug	4-1	Installation of Cylinders	6-21
Removal and Disassembly		Cylinder Head Fin Stabilizers	6-23
Ignition Harness	4-1	Cylinder Painting	6-24
Magnetos	4-1	Intercylinder Baffles	6-24

TABLE OF CONTENTS (CONT.)

SECTION	PAGE	SECTION	PAGE
7 CRANKCASE, CRANKSHAFT AND RECIPROCATING PARTS		7 CRANKCASE, CRANKSHAFT AND RECIPROCATING PARTS (CONT.)	
Removal of Accessories	7-1	Crankshaft Oil Seal	7-17
Disassembly		Hydro Control Valve	7-17
Starter Ring Gear Support	7-1	Generator or Alternator Drive	
Prop. Governor Oil Line	7-1	Belt	7-17
Crankcase	7-1	Crankshaft Idler Gears	7-18
Crankshaft	7-1		
Counterweights	7-3		
Sludge Tubes	7-3		
Cleaning		8 OIL PUMP AND FUEL INDUCTION	
General	7-3	General	8-1
Piston Cooling Oil Jets	7-3	Disassembly	
Inspection		Intake Pipes	8-1
Bearings	7-4	Carburetor or Fuel Injector	8-1
Crankcase		Induction Housing	8-1
Visual	7-4	Oil Pump	8-1
Dimensional	7-4	Cleaning	
Crankshaft		Oil Pump	8-1
Visual	7-4	Carburetor	8-1
Dimensional	7-4	Fuel Injector	8-1
Camshaft		Injector Nozzles	8-1
Visual	7-5	Inspection	
Dimensional	7-5	Oil Pump	8-1
Main Bearing Clearance	7-5	Carburetor	8-2
Connecting Rods		Fuel Injector	8-2
Dimensional	7-6	Nozzle Assembly	8-2
Parallelism Check	7-6	Repair and Replacement	
Squareness Check	7-6	Intake Pipes	8-3
Crankshaft Counterweight		Carburetor	8-3
Bushings	7-6	Fuel Injector	8-3
Piston Cooling Oil Jets	7-6	Reassembly	
Repair and Replacement		Induction Housing	8-4
Crankshaft		Flow Dividers	8-6
Bearing Surfaces	7-7	Intake Pipes	8-6
Straightening Flange	7-7	Nozzle Assembly	8-6
Oil Seal Surface	7-8		
Counterweight Bushings	7-9		
Counterweight Bushings	7-10	9 TEST PROCEDURES	
Connecting Rod Bushings	7-10	General	9-1
Crankshaft and Gear Assy.	7-10	Test Limits	9-2
Starter Ring Gear	7-10	Turbocharged Engines	9-3
Crankcase	7-10	Pressure Carburetors	9-3
Oil Relief Valve Sleeve	7-11	Run-in Procedure	9-3
Oil Pressure Relief Valve	7-12	Run-in Schedule	9-3
Crankcase	7-12	Oil Consumption Run	9-4
Crankshaft Idler Gear Shaft		Oil Pressure Relief Valve	9-4
Recess	7-12	Idle Speed and Mixture Adjust- ment	9-4
Reassembly		Preservation and Storage	
Crankshaft		(Engine)	9-5
Sludge Tubes	7-12	Preservation - Run	9-6
Expansion Plug	7-12	Preservation and Storage	
Propeller Flange Bushings	7-12	Carburetors and Fuel Injec- tors	9-6
Gear	7-12		
Counterweight Assembly	7-12		
Connecting Rods	7-14		
Camshaft	7-14		
Crankcase	7-15		
Propeller Governor Drive	7-15	10 TABLE OF LIMITS	